

# **X**TREMEPOWER **US**

## **HUNTING CROSSBOW**

ITEM: 98026



## **OWNER'S MANUAL AND SAFETY INSTRUCTIONS**

**SAVE THIS MANUAL: KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATING, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL NEAR THE ASSEMBLY DIAGRAM (OR MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO NUMBER)**

**FOR QUESTIONS PLEASE CALL OUR CUSTOMER SUPPORT: (909) 628 0880 MON-FRI 9AM TO 3PM PST**



## GENERAL SAFETY WARNINGS

The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator. Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.


- **Read and understand all instructions.** Failure to follow all instructions may result in serious injury or property damage.
- **DO NOT** allow persons to operate or assemble the crossbow until they have read this manual and have developed a thorough understanding of how it works.
- **DO NOT modify this product in any way.** Unauthorized modification may impair the function and/or safety and could affect the life of the crossbow. Mishandling or misuse may result in serious injury to yourself or others, damage to your crossbow or poor performance. It's critical that you maintain a regular maintenance schedule so your crossbow continues to function at a high level.
- **NEVER** place fingers or thumbs on, in or near the arrow/flight track, the string and/or the cables. Placing fingers or thumbs on, in or near the arrow/flight track, the string and/or the cables may result in serious injury, including finger and/or thumb amputation.
- **DO NOT** allow any foreign object(s) on, in and/or near the arrow/flight track, the string and/or the cables. Allowing any foreign objects, including tree branches, vines, tree bark, clothing, hunting accessories (e.g., binoculars, range finders, game calls, pull-up/hoist ropes, etc.) on, in and/or near these areas may result in crossbow and/or property damage and may lead to serious injury or death!
- **NEVER** "dry fire" (i.e., release a cocked crossbow string without a recommended arrow properly loaded into the receiver) your crossbow. Dry firing this crossbow will immediately void your warranty and result in catastrophic damage to the crossbow. Should this crossbow dry fire, it must be inspected by a qualified service representative prior to further use. Failure to follow these instructions may result in serious injury!
- Under no circumstances should you attempt to use your rope cocking device to de-cock your crossbow. Attempting to do so will put you at immediate risk of personal injury and will result in catastrophic damage to your crossbow. Failure to follow these instructions may result in serious injury!
- **NEVER** attempt to use improperly spined (stiffness), improperly weighted (less than 380 grains) and/or improperly sized (length) arrows. Attempting to use improperly spined, weighted and/or sized arrows will immediately void your warranty, may cause crossbow and/or property damage and may lead to serious injury!
- **DO NOT** allow children under the age of 16 and/or older children who have not been properly trained to handle, operate and/or otherwise use this crossbow and/or its accessories without proper adult supervision. Crossbows are serious sporting implements and should be treated as such. Failure to follow these instructions may result in serious injury or death!
- You must wear quality, close-toed shoes or boots while operating this crossbow. Never operate this product barefooted. Sandals, house shoes, socks/stockings, open-toed shoes, slippers, etc. must not be worn when operating this crossbow. Failure to follow these instructions may result in serious injury!
- **ALWAYS** keep your fingers below the arrow/flight track and out of the path of the string and cables. Should the string strike your fingers, they may be amputated.

# FEATURES AND SPECIFICATIONS


- **ALWAYS** inspect the crossbow and arrows prior to each use. Frayed and/or worn strings and cables must be replaced immediately and never fired. Bent and/or damaged arrows/hooks are not safe to fire and should be discarded. **NEVER** attempt to use a damaged arrow or hook.
- **ALWAYS** use arrows designed for crossbows that are the appropriate weight and length. Attempting to use “compound arrows,” “vertical bow arrows” or “recurve bow arrows” (i.e., full-length arrows) will immediately void your warranty, lead to catastrophic crossbow and/or property damage and may lead to serious injury.
- **ALWAYS** make certain the arrow is properly loaded, with the odd-colored vane (fletching) facing down and the anti-dry fire device fully engaged, thus precluding a dry fire.
- **NEVER** attempt to fire this crossbow until you are sure of your intended target.
- **ALWAYS** use a crossbow-approved target/backstop. Using an inadequate target/backstop will result in dangerous conditions and may result in personal injury and/or property damage.
- **ALWAYS** wear safety glasses when assembling, cleaning, cocking, loading or shooting this crossbow.
- **ALWAYS** wear quality close-toed shoes or boots while operating a crossbow. Bare feet, flip flops, house shoes, slippers, socks/stockings or open-toed shoes should not be worn when operating a crossbow.
- **NEVER** attempt to transport, carry and/or stalk with a loaded crossbow.
- **NEVER** attempt to store a cocked and/or loaded crossbow.
- **NEVER** attempt to fire this crossbow when obstructions are present (e.g., tree branches, vines, leaves, etc.) which block or encumber the limbs, string, cables and/or arrow’s flight path. Attempting to fire an obstructed crossbow will lead to catastrophic crossbow and/or property damage and may lead to serious injury or death.
- **NEVER** attempt to use a crossbow for any purpose other than hunting or target shooting. Any other use can lead to catastrophic crossbow and/or property damage and may lead to serious injury or death.
- **NEVER** consume drugs and/or alcohol before or while attempting to operate a crossbow. Such behavior may impair your ability to use this product safely and responsibly.
- **NEVER** attempt to carry or haul a crossbow up or down a tree while climbing. Use a pull-up or hoist rope of sufficient strength to haul the crossbow up or down after safely securing yourself in a tree stand with a full-body fall arrest harness attached.
- **NEVER** attempt to use this crossbow if you have a history of heart problems, back problems and/or any other physical impairment, which may limit your ability to use and/or operate this crossbow in a safe manner.
- **NEVER** allow bystanders to stand in front of or beside you while operating this crossbow. Bystanders must stand a significant distance **BEHIND** the shooter’s location.
- **ALWAYS** grip the rope cocking device firmly, in a manner which precludes it slipping from your hands while cocking this crossbow. **NEVER** attempt to cock this crossbow with wet or damp hands. Should the cocking device slip while cocking this crossbow, serious injury and/or equipment damage may result.
- **NEVER** attempt to perform service and/or repair to this crossbow yourself. Service and/or repairs should be performed by a qualified service representative only. Attempting to perform service/repairs to this crossbow will immediately void your warranty, lead to catastrophic crossbow and/or property damage and may lead to serious injury or death.

# OPERATION

 1. Attach the cable slide to the cables/

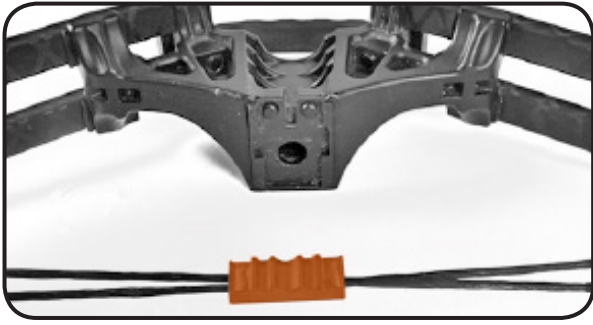

 
2. Slide the cable slide into the opening at the end of the barrel while sliding the string down the top of the rail.

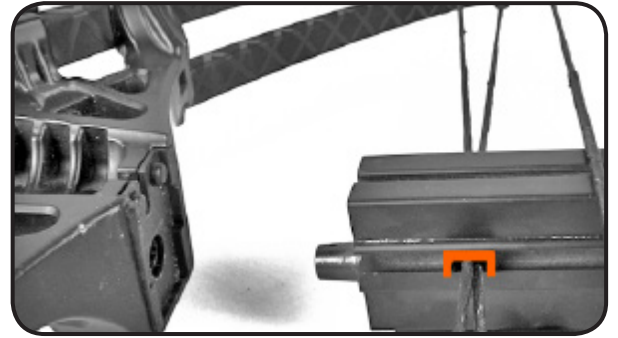

3. Slide the riser onto the barrel. Install and tighten the limb screw using the hex wrench. Insert the limb set screw to prevent the limb screw from coming loose. Tighten using a hex wrench.



 
4. Place the cocking stirrup on the ground and place a foot securely inside.

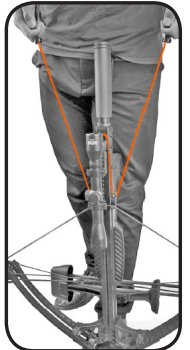

5. Place the center of the cocking rope in the rope groove.



 6. Pull both t-handles simultaneously, drawing the crossbow string back under the bolt retention spring into the string opening of the trigger mechanism.

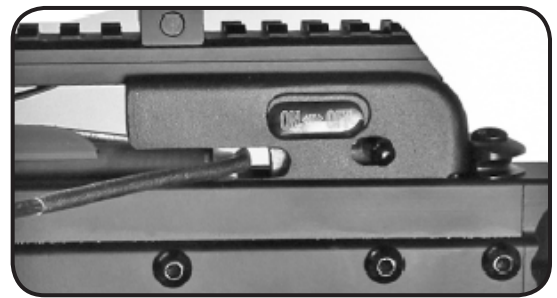

7. Place the arrow/bolt so that the cocking vane is down in the flight groove.



8. Always keep fingers and thumb below the travel the patch of the bow string.



# DISCLAIMER

## PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

**Record Product's Serial Number Here:** \_\_\_\_\_

**Note:** If product has no serial number, record month and year of purchase instead.

**Note:** Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

The material in this manual is for informational purposes only. The product(s) it describes are subject to change without prior notice, due to the manufacturer's continuous development program. XtremePowerUS makes no representations or warranties with respect to this manual or with respect to the products described herein. XtremePowerUS shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.



**SAVE THESE INSTRUCTIONS.**

### Questions, issues or missing parts?

Before returning to your retailer, our customer service team is here to help.



Call Us: 909.628.0880

Email Us: [customer@xtremepowerusa.com](mailto:customer@xtremepowerusa.com)

Hours of Operation: 9am - 3pm PST Monday - Friday

**PRODUCT MADE IN CHINA**