



80W BATTERY CHARGER

ITEM # 26808



OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL. KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATION, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL, OR THE MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO SERIAL NUMBER

FOR QUESTIONS, PLEASE CALL CUSTOMER SERVICE: 909.628.0880

SAFETY WARNINGS

WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in injury and/or property damage. Save all warnings and instructions for future reference.

The warning and safety instructions in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when operating or cleaning tools and equipment. Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand before operating the product.

Use charger in a safe well ventilated environment that is clear of corrosive or explosive chemicals, flammable liquids or gases. Keep charger and battery away from sources of ignition as a charging battery produces explosive gases. It is recommended that safety goggles be worn.

Check charger for general condition and ensure that cables, input/output leads, plugs and croco-dile clips are not damaged in any way. Never use a charger that is damaged and never attempt to carry out repairs to a damaged charger.

Charger should only be used by a responsible and competent adult.

WARNINGS

Do NOT attempt to start the vehicle with the charger connected to the battery.

Do NOT attempt to charge a non-rechargeable battery.

Do NOT use this charger to charge dry cell batteries.

Do NOT attempt to charge a frozen battery.

Only lead, gel and AGM batteries (12V/1.2Ah to 12V/120Ah) should be charged.

Charger should not be used as a continuous source of power.

Only use cables that are provided with this charger.

Turn off mains power supply before disconnecting charger from battery.

Avoid contact with battery acid and wash immediately with water if acid does come into contact with skin or eyes. Wear safety goggles and protective clothing to offer protection from acid and electrolyte.

Do NOT attempt to clean charger with cleaning solvents, use only a clean cloth or tissue.

Do NOT smoke near battery and ensure adequate ventilation.

Do NOT cover charger during operation and disconnect from mains when not in use.

Disconnect charger if battery heats up excessively or if leaks from the battery appear.

When charging battery never allow battery terminals to be connected by any means.

Remove all metal objects (rings, bracelets etc.) when handling battery charger so as to avoid short circuits and resultant burns.

CONNECTING CHARGER TO BATTERY (IN VEHICLE)

Connect RED positive (+) lead to positive (+) battery terminal and then connect the BLACK negative (-) lead to the chassis of the vehicle well away from the battery and fuel lines, then connect the charger to the mains power source. Position charger as far away from the battery as the cables will allow.

CONNECTING CHARGER TO BATTERY (OUT OF VEHICLE)

Connect RED positive (+) lead to positive (+) battery terminal and then connect the BLACK negative (-) lead to the negative (-) battery terminal, then connect the charger to the mains power source. Position charger as far away from the battery as the cables will allow.

This charger can be left connected to your battery (in or out of the vehicle) for extended periods of time when your vehicle is not being used (e.g. used irregularly or seasonally) without risk of damage to battery or charger as it has in-built protection.

It also has protection against short circuits and bad connections and will automatically restart following a power outage.

PRODUCT INFORMATION

Characteristics of charger: 1A/2A/3A/4A.

Automatic selection according to the capacity or the level of charge of the battery.

Winter Mode (for standard battery 12V or AGM 12V): temperature: 5°C or lower.


 
 
Charge indicator : each bar represents 20%.

If the border flashes: charging in progress.

If the border and all the bars are lit: battery charged 100% and then goes to sleep.

Battery voltage, Resolution: 0.1V: indication of polarity reversal of the battery, battery faulty or connection problem.

Anti-spark and anti-overheating built in.

Model	26808
Type of battery	Standard battery, AGM, gel
Input voltage	110V,120V 50Hz 0.6A
Protection class	IP45 (impervious to dust and water)
Double Insulation	
Battery capacity	Min : 1.2 Ah - Max : 120Ah
Input current	6V/1-4A  12V / 1-4A 
Weight	1.1 Lbs
Dimensions	8 x 3.2 x 1.75 Inch

Working environment: 14°F to 104°F Storage: 14°F to 122°F.

If during charging the battery temperature exceeds 104°F, the current can be reduced. If the temperature exceeds 113°F, charging is stopped, it is resumed only when the temperature of the battery has lowered below the limits of security.

Display Screen



- 1-12V standard lead-acid battery.
- 2-12V AGM battery mode.
- 3- Winter mode for standard and AGM.
- 4- 6V standard lead-acid battery mode
- 5- Charge indicator, each bar represents 20%.
- 6- Voltage indicator.
- 7- Reverse polarity indicator.
- 8- Bad battery indicator.
- 9- Indicates poor clamp connection.



Disconnect the charger from the mains before connecting or disconnecting the cables from the battery.
Use charger in a ventilated area.

TROUBLESHOOTING

Battery polarity reversal symbol displayed.	Battery clamps reversed.
No display.	Mains power supply not connected.
Clamp indication and voltage symbols displayed.	Dirty or oxidised battery terminals. Low or unstable charging current.
Display backlight on, display showing 0.0V and clamp symbol.	Battery not connected.

Output lead fuses should be replaced as needed (5A blade fuse) following any faults. Similarly the mains plug fuse (3A BS1362) should be replaced if needed.

DISCLAIMER

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

The material in this manual is for informational purposes only. The product(s) it describes are subject to change without prior notice, due to the manufacturer's continuous development program. XtremePowerUS makes no representations or warranties with respect to this manual or with respect to the products described herein. XtremePowerUS shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.

Questions, issues or missing parts?

Before returning to your retailer, our customer service team is here to help.



Call Us: 909.628.0880

Email Us: customer@xtremepowerusa.com

Hours of Operation: 9am - 3pm PST Monday - Friday

MADE IN CHINA