



1/2 TON UNDER HOIST STAND

ITEM # 58050



OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL. KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATION, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL, OR THE MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO SERIAL NUMBER

FOR QUESTIONS, PLEASE CALL CUSTOMER SERVICE: 909.628.4900

SAFETY WARNINGS

WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in injury and/or property damage. Save all warnings and instructions for future reference.


The warning and safety instructions in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when operating or cleaning tools and equipment. Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand before operating the product.

- DO NOT use this product for anything other than it is intended.
- Make sure to keep the hoist stand clean at all times. Wipe it down after every use.
- Keep children and unauthorized persons away from the work area.
- Wear ANSI approved safety goggles when operating the hoist stand.
- DO NOT use the hoist stand if any part of it is damaged, worn or distorted.
- Keep the work area clean and well lit. Cluttered and dark spaces invite accidents.
- DO NOT allow untrained persons to operate the stand.
- DO NOT make any modifications to the stand.
- Use the hoist stand on stable, flat surface capable of supporting a load.
- Ensure that you read, understand and apply the safety instructions and warnings before use. Failure to heed these instructions may result in property damage and/or personal injury.
- Do not exceed the 2 ton maximum weight capacity.


SAVE THESE WARNINGS.

ASSEMBLY / OPERATION


1. Attach (7) connector plate with component hardware: (8) L-Bracket (middle bridge), (7), using Bolt M8X20(4) ,Washer 8 (5), nut M8 (6).

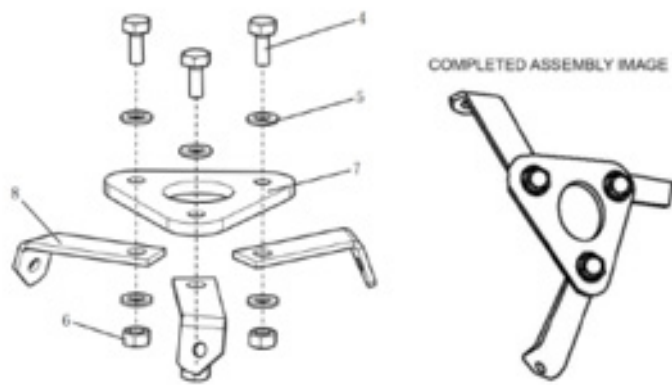


2. Tri-pod Assembly: Attach the pull rod (11) with the support pillar (10), using the plain washer M8 (13) and Bolt M8X16 (12). Attach the short pull rod (14) with the support pillar (10) using the plain washer M8 □13□ and Bolt M8x16 (12).

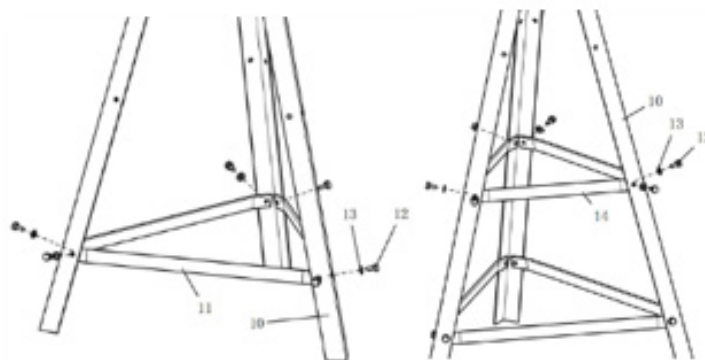


3. Mount the middle bridge (8) with the support pillar (10), using plain washer M8 (13) bolt M8X20 (15) and nut M8 (16). Mount the lock plate (9) with support pillar (10) using the plain washer M8 (5), bolt M8X25 (4) and Nut M8 (6).

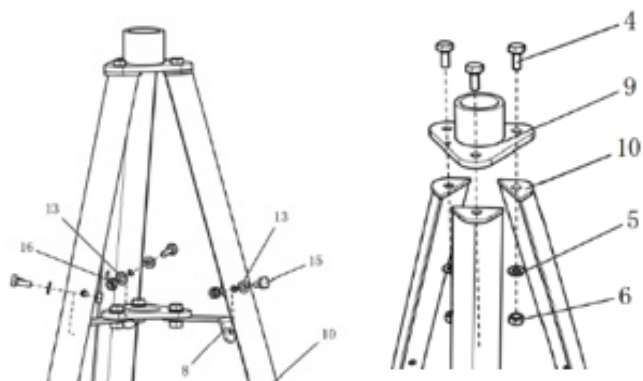

4. Attach column (20) with handle (17), install bearing assembly: first install bearing base (18) screw the handle (17) into the threaded rod (19) and insert to column (20). To adjust the position of the stand, use the lock bolt (21), plain washer M12 (22) and hitch pin clip (23). Attach the saddle bracket using bolt M8X20 (15).

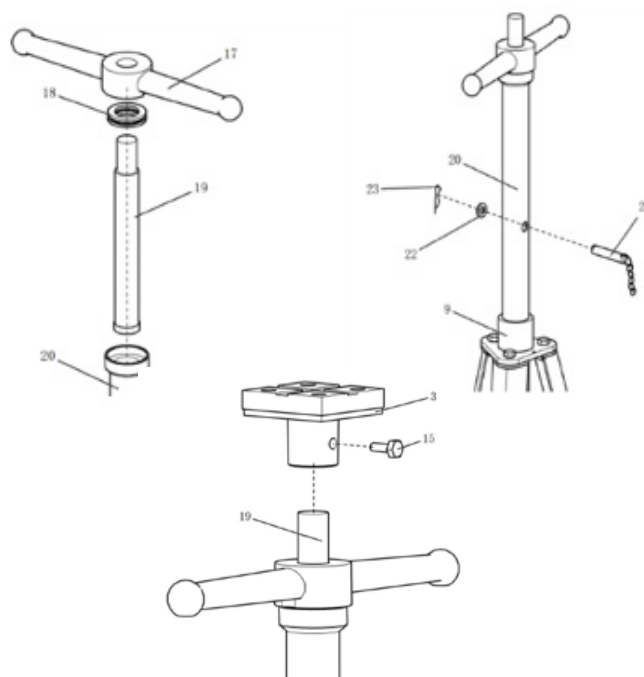

PARTS INFORMATION

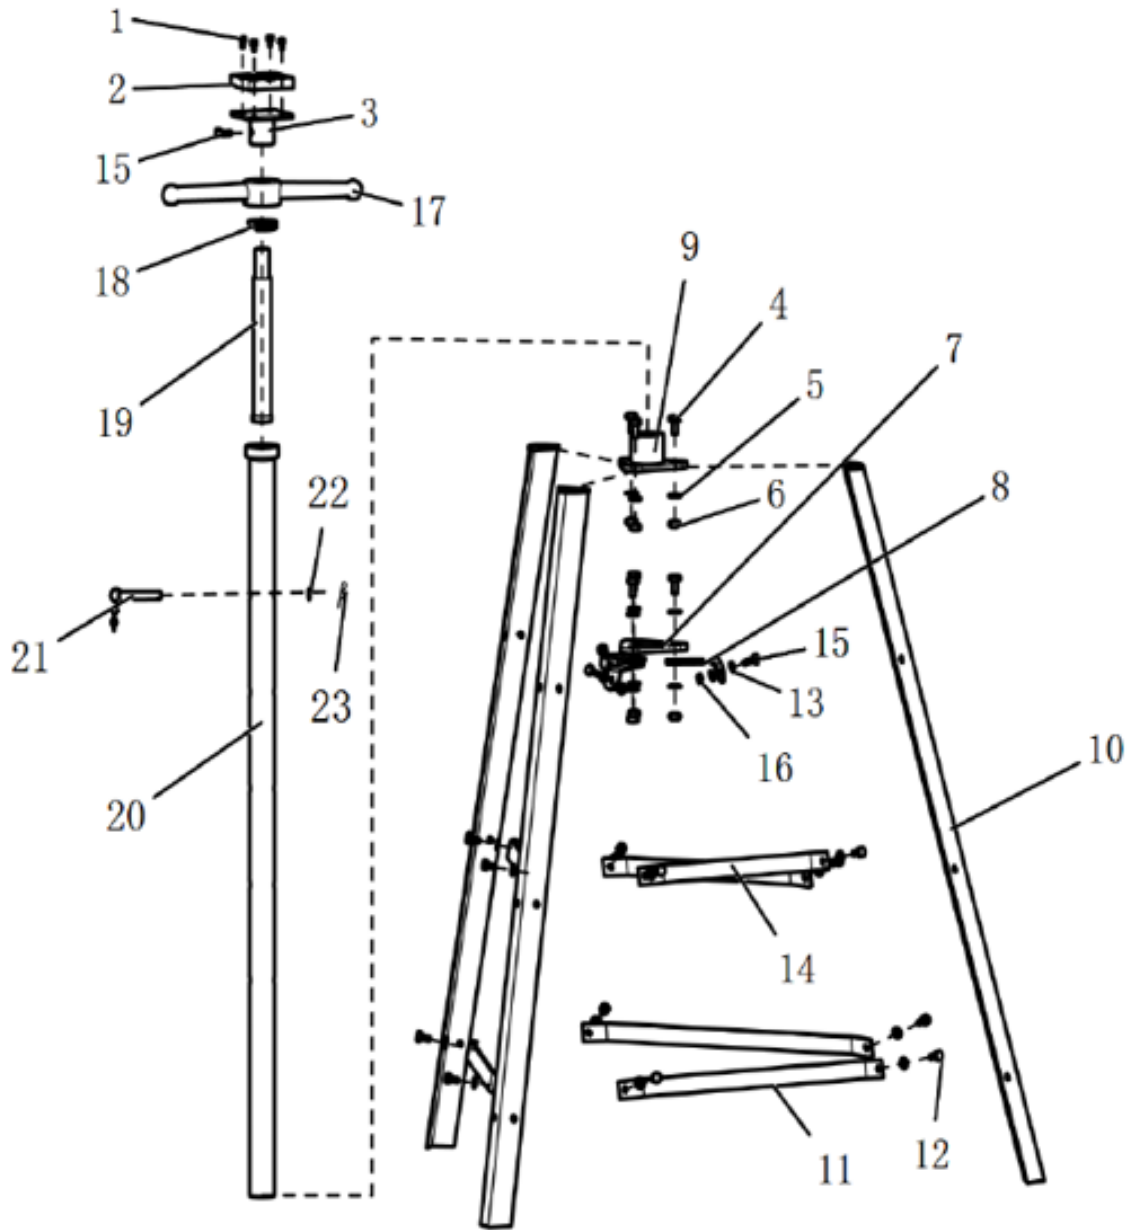

Index	Desc.	QTY		Index	Desc	QTY
1	Bolt M6X10	4		13	Washer M8	18
2	Rubber Pad	1		14	Short pull rod	3
3	Saddle	1		15	Bolt M8X20	7
4	Bolt M8X25	3		16	Nut M8	6
5	Washer 8	3		17	Handle	1
6	Nut M8	3		18	Bearing base	1
7	L-Bracket	1		19	Thread rod	1
8	Component	3		20	Column	1
9	Lock plate	1		21	Lock bolt	1
10	Support pillar	3		22	Washer M12	1
11	Pull rod	3		23	Hitch pin clip	1
12	Bolt M8x16	12				

DISCLAIMER

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

The material in this manual is for informational purposes only. The product(s) it describes are subject to change without prior notice, due to the manufacturer's continuous development program. XtremePowerUS makes no representations or warranties with respect to this manual or with respect to the products described herein. XtremePowerUS shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.

Questions, issues or missing parts?

Before returning to your retailer, our customer service team is here to help.



Call Us: 909.628.4900

Email Us: info@starktoolsusa.com

Hours of Operation: 9am - 3pm PST Monday - Friday

MADE IN CHINA