

1-1/2” Leaf Canister with basket T6470

This Leaf Canister is designed to trap leaves and other debris before they enter the pool filter, making cleaning the pool more efficient.

INSTALLATION:

1. Turn off the filter pump.
2. Disassemble the 1-1/2” pool cleaner hose between the first and second sections, counting from the pool wall.
3. Connect the male end of the second section of hose to the top of the canister. Submerge the canister to remove the trapped air. Connect the female end of the first section of hose to the bottom of the canister (See P1). Make sure the first section of hose is connected to the vacuum line or skimmer
4. Submerge the pool cleaner and turn on the filter pump to remove remaining air from the system.



CLEANING THE LEAF CANISTER:

The leaf canister’s clear body allows you to determine at a glance when the leaf canister needs to be emptied.


1. To empty the canister, turn off the filter pump.
2. Disconnect the hose between the cleaner and the canister at the top of the canister.
3. Unscrew the lock ring, by turning counterclockwise as you look down from the top. (See P2)
4. Lift off the lid by placing 2 fingers (Index and middle fingers) into the opening of the lid and pulling it out. (See P3)
5. Empty leaves and debris in the basket, Rinse the basket and canister. Replace the basket back to the main body. (See P4)
6. Install the lid assembly w/ O-ring to the main body. Lubricate the O-ring if necessary.
7. Install the lock ring by rotating clockwise. Do not over torque the lock ring. (See P5)
8. Reconnect the hoses to the leaf canister

SPARE PARTS


ITEM	DESCRIPTION
1	Lock Ring
2	Lid Assembly with O-Ring
3	O-Ring
4	Fine Filter Bag
5	Leaf Basket
6	Main Body

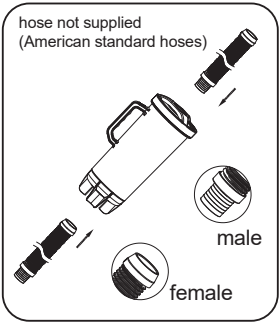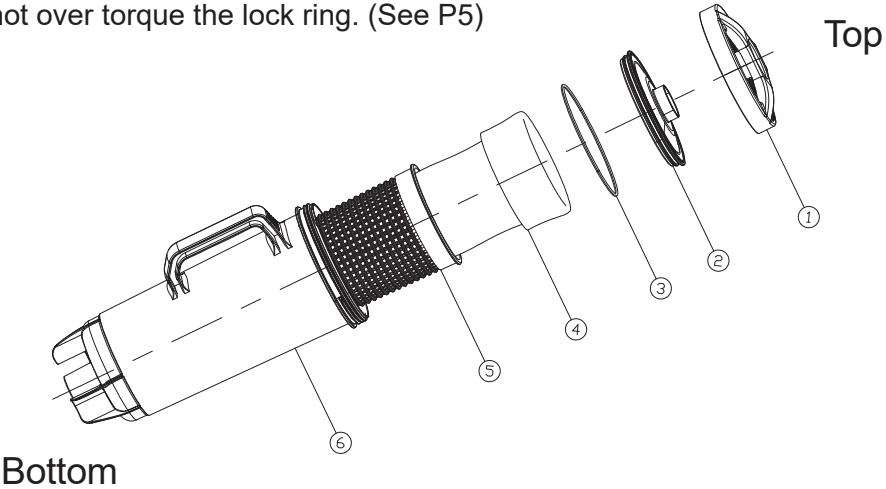


P1

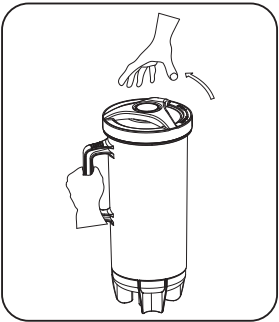


P2

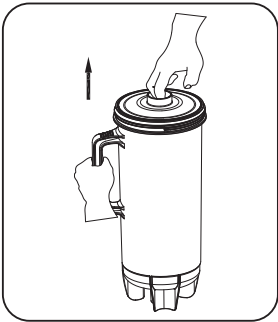


P3

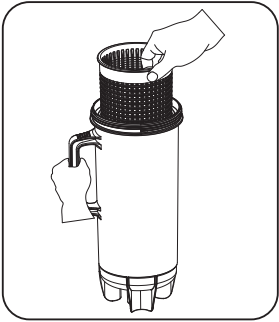

P4

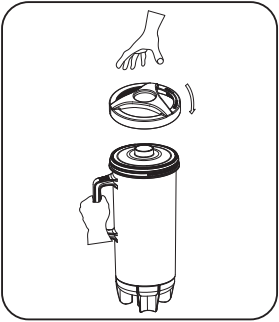

P5

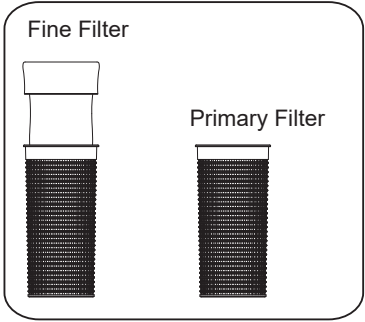

P6