


OWNER'S MANUAL

20 IN. WALL FAN

SKU: 92027

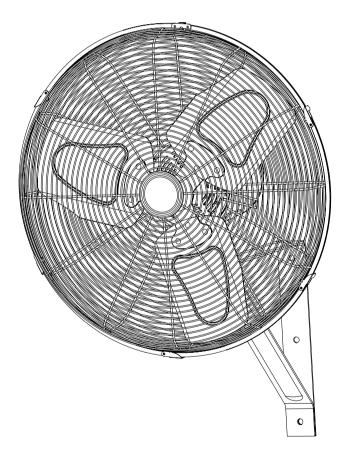

OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL: KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATING, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL NEAR THE ASSEMBLY DIAGRAM (OR MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO NUMBER)

FOR QUESTIONS PLEASE CALL OUR CUSTOMER SUPPORT: 909.628.0880 MON-FRI 9AM TO 3PM PST

SAFETY INFORMATION

WARNING

- 1. Read and save these instructions. Do not operate fan unless you have read these instructions.
- 2. Unplug the fan before moving it or performing maintenance. Do not touch the fan when your hands are wet.
- 3. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
- 4. Unplug the fan when it is not in use.
- 5. DO NOT unplug the fan by pulling the cable cord. Unplug by holding the plug and pulling.
- 6. DO NOT use the fan when there is damage to the cable cord or plug. If the supply cord is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons.
- 7. DO NOT use the fan with an extension cord.
- 8. DO NOT use the fan close to fires or flammable material.
- 9. DO NOT insert your hand or other objects into the grille or the movable parts.
- 10. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- 11. DO NOT use this fan outdoors, this fan is designed for indoor use only.

CAUTION


- 1. Unplug the fan from the socket and clean it with a soft cloth.
- 2. DO NOT immerse the fan in liquid.
- 3. Fit the guard onto the fan before starting up the fan.
- 4. This fan is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety. Supervise children to ensure they do not play with the fan.

ASSEMBLY INSTRUCTION


- 1. Mark the hole locations by using the brackets, then drill the holes.
- A. For concrete wall installation, after drilling, you would insert the wall anchors and tap them flush with the wall, position the bracket and then screw the two bolts into the anchors, securely attaching the wall.
- B. For wall stud installation, after drilling the smaller diameter pilot hole, position the bracket and screw the two bolts into the wall until they are secured.

ACAUTION: The fan is only suitable for concrete wall. Do not use for dry wall mounting. Use the mounting accessories shipped with products for wall mounting.

▲WARNING: This fan is to be mounted with the wall bracket, it MUST be mounted and secured on a solid wall that is structurally sound to support the fan and mounting bracket. The wall bracket along with the fan MUST NOT be mounted on any surface that is subject to vibration, wobbling, movement or the like. The fan MUST be mounted and properly secured to a STATION-ARY structure.

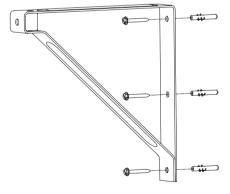


a. concrete wall

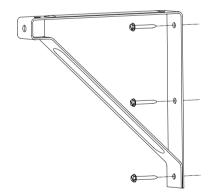


b. wall stud

ASSEMBLY INSTRUCTION (CONTINUED)

2. Insert the Upper Bracket into Motor Frame by screws as follow: Firstly, No.1 screw M8x18 match No.4 Hexangular Nut. Secondly, No. 2 screw M8x20 match No.5 Washer Nut M8. Finally, the Upper Bracket No. 3 will fix into Motor frame.

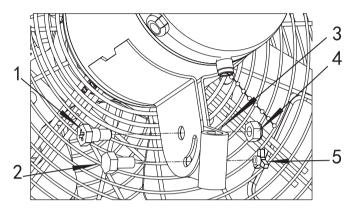


3. Assemble the Upper Bracket with the wall bracket by screws as follow: Firstly, insert No. 1 Screw M12×100 through the Upper Bracket Secondly, connect the Lower Bracket with Upper Bracket by No. 1 Screw Finally, fasten two bracket by No. 2 Spring washer and Hexangular Nut M12

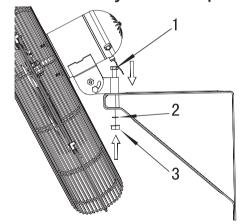

4. Loose Washer Nut M8 for adjusting the desired tilt angle of Fan Head, and fix it again.

OPERATION INSTRUCTION


- 1. Place the fan on a safe, flat surface where it can not fall or be pulled by the cord.
- 2. Adjust the desired speed by pulling the chain switch (Stop Low- Medium High).

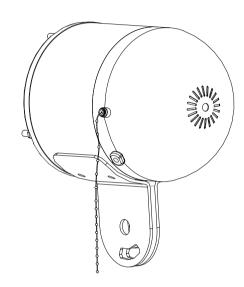

CARE AND CLEANING

Unplug the appliance before cleaning. Do not use water for cleaning metal surfaces. Slightly moisten a cloth and wipe off the surfaces of the fan. In order to remove dust from the grill, use a vacuum cleaner or remove the front grill by removing the securing screws on the edge of the grill. After cleaning, remount the grill. After doing this, fasten the screws on the edge of the grill.

PART LIST

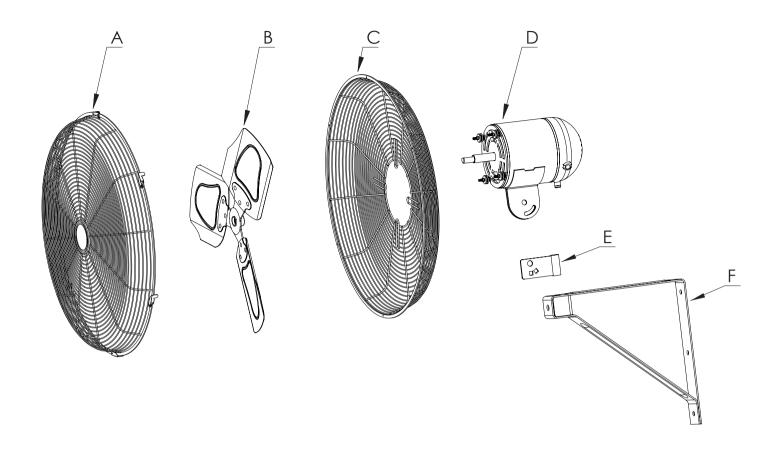

PART	DESCRIPTION	PART #
Α	Front Grill	92027-01
В	Blade	92027-02
С	Rear Grill	92027-03
D	Motor	92027-04
Е	Upper Bracket	92027-05
F	Wall Bracket	92027-06

OF NOTE

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND OF THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IF FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here:	
--------------------------------------	--

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.



SAVE THESE INSTRUCTIONS.

Questions, Problems or Missing Parts?



Before returning to a retailer, our exceptional customer service is available to help.

Call Us: 909.628.0880

Hours of Operation: 9 to 3pm PST, Monday-Friday

Email: customer@xtremepowerusa.com

PRODUCT MADE IN CHINA