



TWO-BURNER PORTABLE STOVE W/ STAND

ITEM: 95512



OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL: KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATING, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL NEAR THE ASSEMBLY DIAGRAM (OR MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO NUMBER)

FOR QUESTIONS PLEASE CALL OUR CUSTOMER SUPPORT: 909.628.0880 MON-FRI 9AM TO 3PM PST

IMPORTANT SAFETY INFORMATION

WARNING

GENERAL SAFETY WARNINGS

Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to a gas cylinder. Keep these instructions for future reference. This instruction manual contains important information necessary for the proper assembly and safe use of the appliance. Follow all warnings and instructions when using the appliance. If you have questions about assembly, operation, servicing or repair of this product, please call Customer Service at 909.628.0880.

FOR YOUR SAFETY

If you smell gas:

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.

FOR YOUR SAFETY

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- **USE EXTREME CAUTION:** Using it in an enclosed space can kill you.
- **NEVER** use this appliance in an enclosed space such as a camper, tent, car or home.
- This stove is a combustion appliance. All combustion appliances produce carbon monoxide (CO) during the combustion process. This product is designed to produce extremely minute, non-hazardous amounts of CO if used and maintained in accordance with all warnings and instructions. **DO NOT** block air flow into or out of the stove.
- Carbon Monoxide (CO) poisoning produces flu-like symptoms, watery eyes, headaches, dizziness, fatigue and possibly death. You can't see it and you can't smell it. It's an invisible killer. If these symptoms are present during operation of this product get fresh air immediately.
- For outdoor use only.

EXPLOSION FIRE HAZARD

- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources or where temperatures exceed 120degrees F (49°C).
- Propane is heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.
- **NEVER** install or remove propane tank while outdoor stove is lighted, near flame, pilot lights, other ignition sources or while outdoor stove is hot to touch.
- During operation, this product can be a source of ignition. Never use the stove in spaces that contain or may contain volatile or airborne combustibles, or products such as gasoline, solvents, paint thinner, dust particles or unknown chemicals. Minimum clearances from combustible materials: 12 inches from the sides & 48 inches from the top.
- Provide adequate clearances around air openings into the combustion chamber.
- **NEVER** use inside house, camper, tent, vehicle or other unventilated or enclosed areas. This stove consumes air (oxygen). **DO NOT** use in unventilated or enclosed areas to avoid endangering your life.

IMPORTANT SAFETY INFORMATION

- This product is fueled by propane gas. Propane gas is invisible, odorless, and flammable. An odorant is normally added to help detect leaks and can be described as a “rotten egg” smell. The odorant can fade over time so leaking gas is not always detectable by smell alone.
- Propane gas is heavier than air and leaking propane will sink to the lowest level possible. It can ignite by ignition sources including matches, lighters, sparks or open flames of any kind many feet away from the original leak. **Use only propane gas set up for vapor withdrawal.**
- Propane gas should be stored or used in compliance with local ordinances and codes or with ANSI/NFPA 58. **Turn off propane when not in use.**
- **CALIFORNIA PROPOSITION 65:WARNING:** This fuel, and by products of combustion of this fuel, contain chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.
- Keep all connections and fittings clean. Inspect propane cylinder and stove propane connections for damage before attaching.
- During set up, check all connections and fittings for leaks using soapy water. Never use a flame. Bubbles indicate a leak. Check that the connection is not cross-threaded and that it is tight. Perform another leak check. **If there is still a leak, remove the cylinder and contact Stark Tools for service or repairs.**
- Use as a cooking appliance only. **NEVER** alter in any way or use with any device or part not specifically designed and sold for this product.
- Clean stove frequently to avoid grease accumulation and possible grease fires.
- **NEVER** leave stove unattended when hot or in use.
- **Keep out of reach of children.**
- Propane stoves and appliances are for outdoor use only. They should be placed on a flat, level surface that is sturdy and never near a wall or other obstruction.
- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources. Minimum clearances from combustible materials: 12 inches from the sides and 48 inches from the top.
- When cooking with oils, fire's can happen easily. Use extreme caution when using this stove and never leave it unattended while in use.
- Be sure to provide adequate clearances around air openings into the combustion chamber.

WARNING: Not for home or recreational vehicle use. We cannot foresee every use which may be made of our products. Check with your local fire safety authority if you have questions about use. Other standards govern the use of fuel gases and heat producing products for specific uses. Your local authorities can advise you about these.

- Never refill disposable cylinders.
- Use the preset regulator that came with the stove. Do not attempt to adjust.

During stove set-up, check all fittings for leaks using soapy water. Never use a flame.



SAVE THESE WARNINGS

OPERATION and MAINTENANCE

PREPARATION

1. Attach legs and secure locking nuts.
2. Place stove on a flat, level surface.
3. Make sure the stove burner valves are in the OFF position.
4. Attach the propane hose to the brass stove inlet fitting.
5. Make sure propane bulk tank valve is closed.
6. Attach the propane hose to the outlet of the propane tank.
7. Slow open propane tank valve and check for leaks by applying a small amount of liquid soap and looking for bubbles to appear.

OPERATION

1. Hold a match or extended lighter flame near the burner. Slowly open the burner valve on the stove. Fig. 1
2. Adjust the flame to the desired height. The flame should be compact and blue with a light yellow tip. If the flame is too yellow, adjust the air mixture valve under the throat of the burner. Fig 2. until the desired flame color is achieved.



FIG.1



FIG.2

3. The burner outlets will change to a light gray/white after heating and use. This is normal.
4. After use, let it cool for 15 minutes before storage or transport.

CLEANING

1. Allow burners and steel grate to cool completely.
2. Turn valve on propane tank to the OFF position.
3. Remove propane hose from the tank and stove.
4. Stove may be wiped down with soap and water.
5. Allow stove to dry thoroughly before storage.
6. Never store the stove with propane hose attached.
7. No other maintenance is necessary.

STORAGE

1. DO NOT leave the propane cylinder attached to the stove during transport or storage.
2. Wipe the burners, steel cooking grate and the propane hose before storing.
3. It is suggested to store the stove and hose in a nylon storage bag to keep it clean.

CAUTION: DO NOT attempt to connect your camp stove to a natural gas supply. Use only with the hose and regulator supplied with the stove and an approved bulk propane tank.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE:	SUGGESTED ACTION
IGNITION ISSUES	Gas tank valve is closed	Open the gas tank valve
	Hose is blocked or out of shape	Clean or change the hose
	There is air inside the hose	Repeat ignition until air is pushed out of hose
	No gas inside the gas tank	Change with a new gas tank
GAS LEAK	Hose isn't connecting or is broken	Reconnect or change out the hose
	Range knob is not in the OFF position	Put the range knob into the OFF position

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.



SAVE THESE INSTRUCTIONS

Questions, problems, missing parts?

Before returning to your retailer, our exceptional customer service is here to help.



Call Us: 909.628.0880

Email Us: customer@bartonliving.com

Hours of Operation: 9am - 4pm (Monday - Friday)

PRODUCT MADE IN CHINA