

XTREMEPOWER **US**

POOL CLEANER ROBOT W/ CONTROL BOX

ITEM: 75065



OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL: KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATING, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL NEAR THE ASSEMBLY DIAGRAM (OR MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO NUMBER)

FOR QUESTIONS PLEASE CALL OUR CUSTOMER SUPPORT: 909.628.0880 MON-FRI 9AM TO 3PM PST



GENERAL SAFETY WARNINGS

The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator. Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

- **DO NOT** use if unit is damaged in any way.
- **WARNING:** To reduce the risk of injury, children are not allowed to use this product unless they are under close supervision at all times
- **WARNING:** There is a risk of electric shock. Connect only to grounded sockets protected by ground fault circuit breakers (GFCI). If you are unable to verify that the sockets are protected by GFCI, please contact a qualified electrician.
- **WARNING:** To reduce the risk of electric shock, please replace the damaged power cord immediately.
- **WARNING:** Your cleaner should not be used while people are swimming in the pool. Do not allow swimmers in the pool while pool cleaner is operating.
- **WARNING:** DO NOT switch on the pool cleaner if it is not immersed in the water. Operating the cleaner out of the water may cause severe damage and will result in loss of warranty.
- **WARNING:** Always remember to turn the power supply off and unplug it from the power outlet before removing the cleaner from the pool.
- **WARNING:** DO NOT PULL THE POOL CLEANER FROM THE POOL USING THE CABLE.
- **WARNING:** To use this cleaner only when water temperature is 50°F - 95°F and the depth of the pool is 1.64-9.84ft. The cleaner is designed to work for the pool with 128 square feet surface area.
- **WARNING:** Keep the controller box in a dry place which is 11.5 feet away from your pool.



SAVE THESE WARNINGS

OPERATION

1. START/STOP:

Measures the pool size automatically and set the working cycle.

2. FLOOR CLEAN ONLY MODE:

To only clean the pool floor and to increase the clean efficiency.

3. ALL PURPOSE CLEANING MODE:

All-around cleaning, including pool floor; pool wall and waterline.

4. MODE OF WATERLINE CLEAN ONLY:


To quick clean the waterline only.

5. USE APP TO CONTROL (NOT AVAILABLE FOR ALL MODELS):


To control the cleaner by Bluetooth and clean the pool.

OPERATION INSTRUCTIONS:

1. Connect floating power cord.

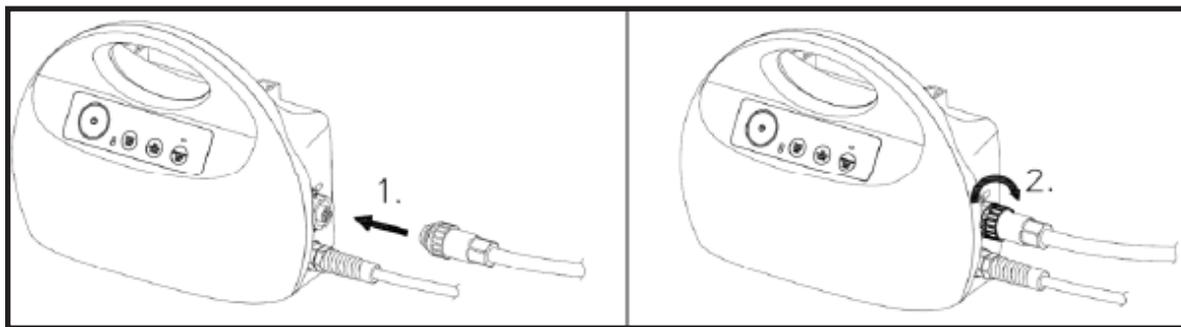

2. Position the power supply so that it is approximately in the middle of the long side of the pool at a distance of 11.5ft.

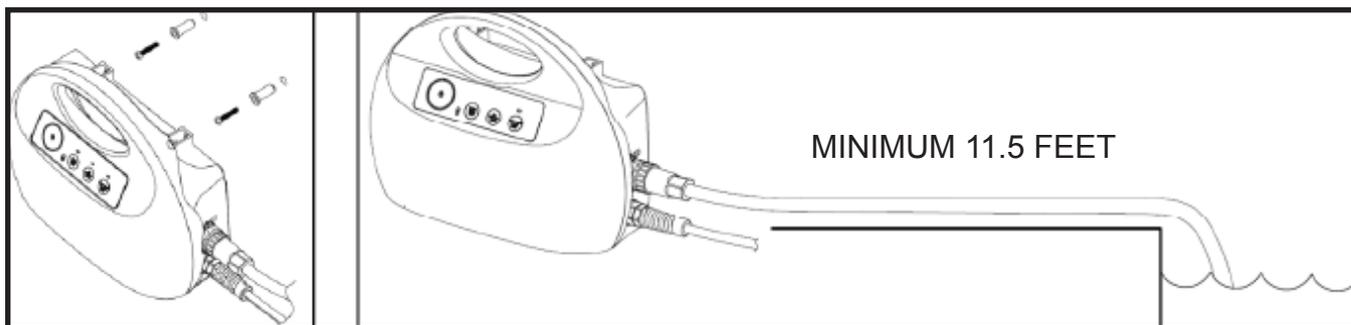

3. Put the Pool Cleaner into the pool. Release the Pool Cleaner and let it sink to the floor of the pool. Make sure that the floating cable is free of any obstructions.

4. Turn the power supply ON (115V AC 60HZ) in the position. One of the three modes light will be on. Press the button for the mode you want to run, then press ON/OFF button, the Pool Cleaner will now operate until it has reached the end of the cleaning.

OPERATION AND MAINTENANCE

5.Mode switching: Press on/off button, choose the mode, press on/off button to start the cleaner.




INDICATOR LIGHTS:

LED LIGHT	STATUS	INDICATION
WHITE	ON	NORMAL OPERATION OF THE POOL CLEANER
WHITE	BLINKS TWICE	WORKS IN REVERSE AFTER AN OBSTACLE
WHITE	ALWAYS BLINKING	BLUETOOTH COMMUNICATION WITH THE POOL CLEANER OR ON STANDBY STATUS
RED	ON	OVERLOAD OR LOAD PROTECTION. LET THE CLEANER SINK TO THE FLOOR OF THE POOL AND PRESS ON/OFF TO START AGAIN

ROUTINE MAINTENANCE:

1. CLEAN THE FILTER BASKET


Turn off the Pool cleaner. Open the filter cover. Clean the filter basket with a hose. Insert the clean filter basket and close the filter cover. Make sure the power supply is switched off and unplugged. It is highly recommended to clean the filter basket after each cleaning cycle.

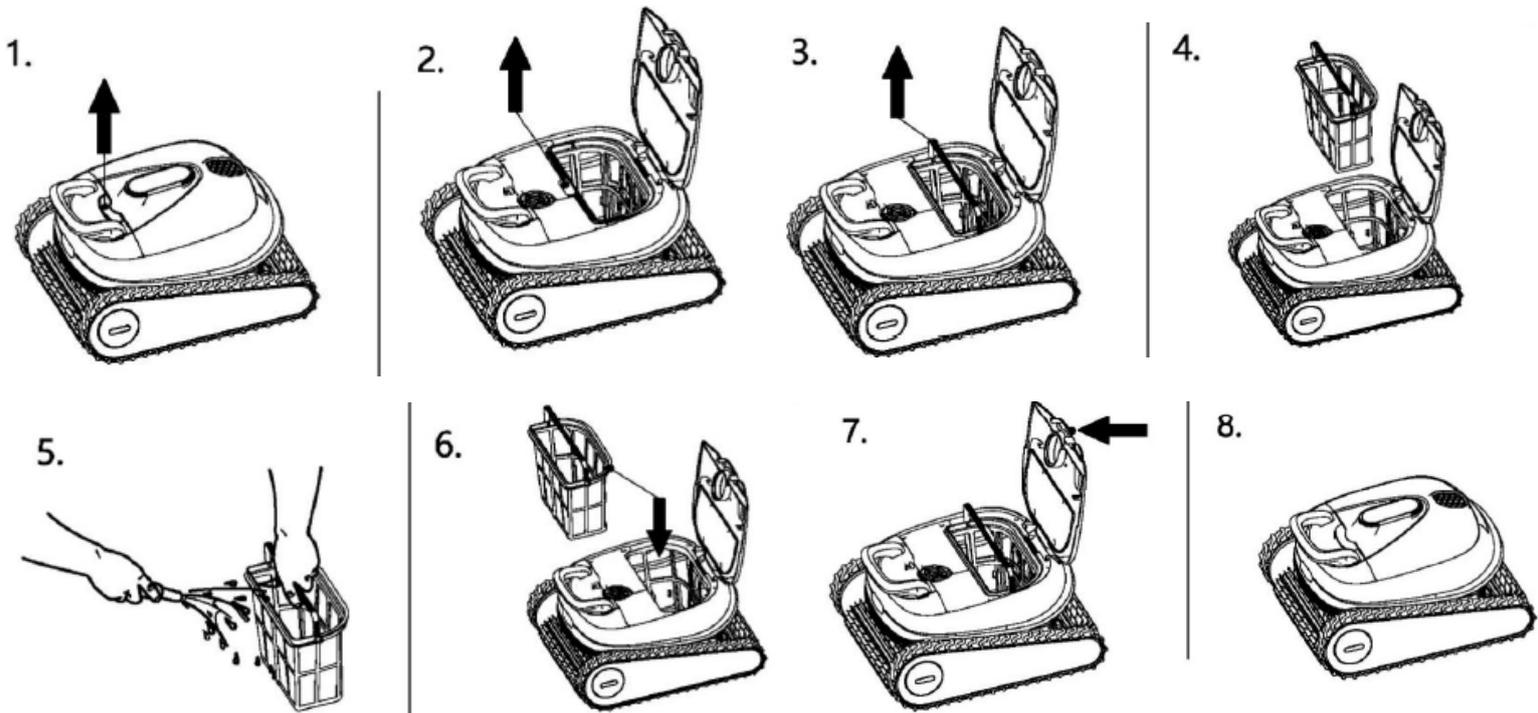


MAINTENANCE

2. PAPER CORE FILTER

The filter paper core is a fragile part, which can filter particles below 5um, and its service life is less than 72 hours. (The filter paper core can be used without affecting the performance of the robot, and it is strongly recommended that the filter paper core be not used in the dirty swimming pool.)

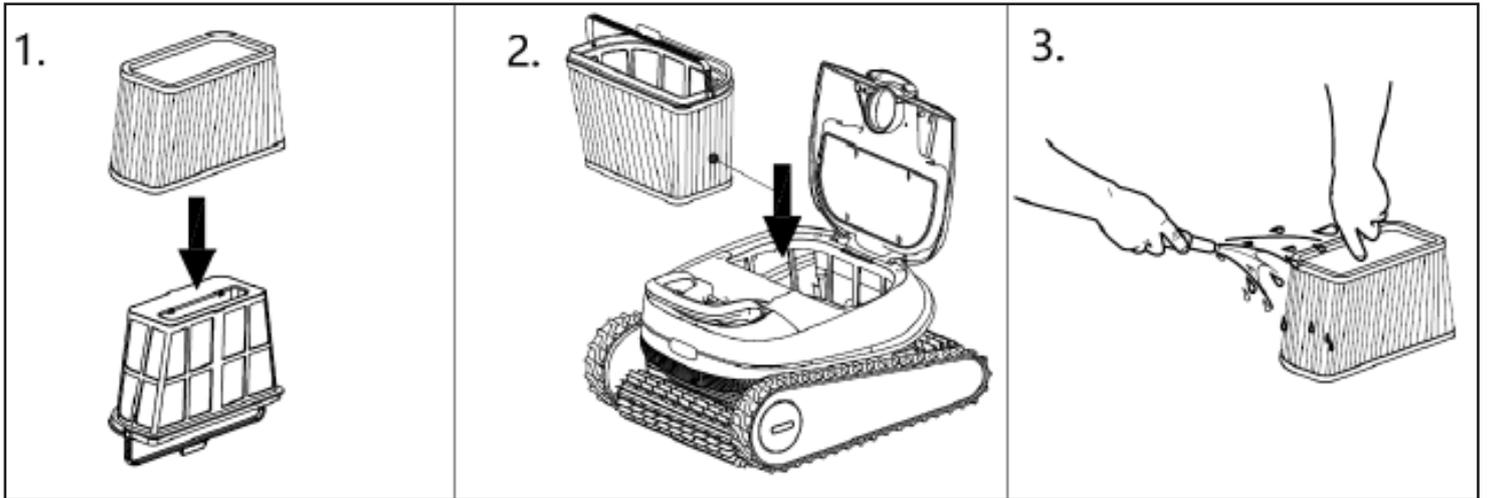

Pool Cleaner Power Box Placement

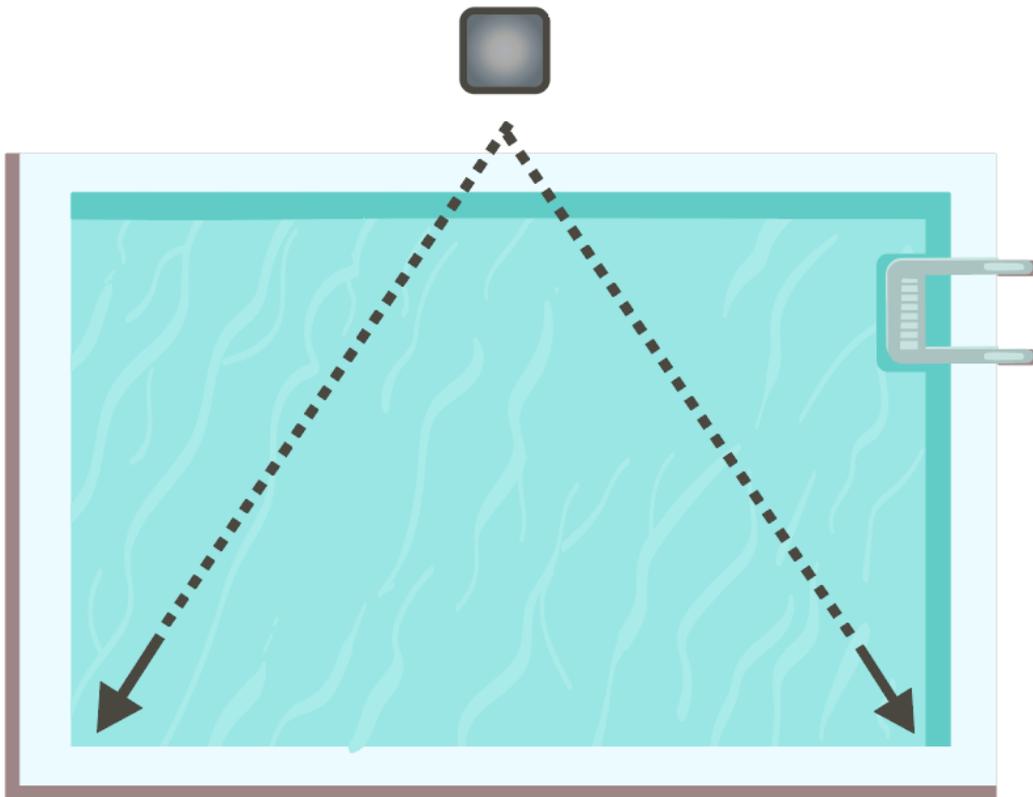

For more information on how to maintain your pool cleaner scan the code below.



To ensure the best coverage of your pool, the power box should be placed at the middle point of the pool at least 12 feet from the pool's edge. Be sure to keep excess cord out of the pool.

TROUBLESHOOTING

3.ROUTINE MAINTENANCE OF THE FLOATING CABLE


The floating cable may get twisted after 8 hours of continuous work, please untwist the cable then before re-start the pool cleaner. After each use, roll up the cable so that it has no kinks.

Symptom	Possible Reason	Corrective action
The pool cleaner moves but does not clean the pool	Clogged filter basket	Clean the filter basket
The pool cleaner does not move	An obstacle blocks the impeller An obstacle blocks the drive belt	Unplug the power supply. Open the impeller cover and check that nothing is trapped in the impeller. Verify that nothing blocks the tracks or wheels.
Debris out from the outlet	Filter basket is broken	Replace the filter basket
	Filter basket is full	Clean the filter basket
The floating cable has kinks	Working for too long time, over 8 hours.	Untwist the floating cable before re-start.
Stop working	Overload or load protection	Let the cleaner sink to the floor of the pool, and press on/off to start again.

SPECIFICATIONS:

LED LIGHT	STATUS
PRORODUCT DIMENSIONS	18.5 x 16 x 10 inches
ROBOT WEIGHT	19lbs
CLEANING AREA	Pool floor, pool wall, waterline
FLOATING CABLE LENGTH	56ft
CLEANING CYCLE	Standard to 2 hours
OUTPUT VOLTAGE	24V DC
OUTPUT CURRENT	4.5A
INPUT VOLTAGE	115V
FREQUENCY	60Hz
HORSEPOWER	120W
CONTROLLER BOX IP CLASS	IP65
MOTOR IP CLASS	IP68

PARTS INFORMATION

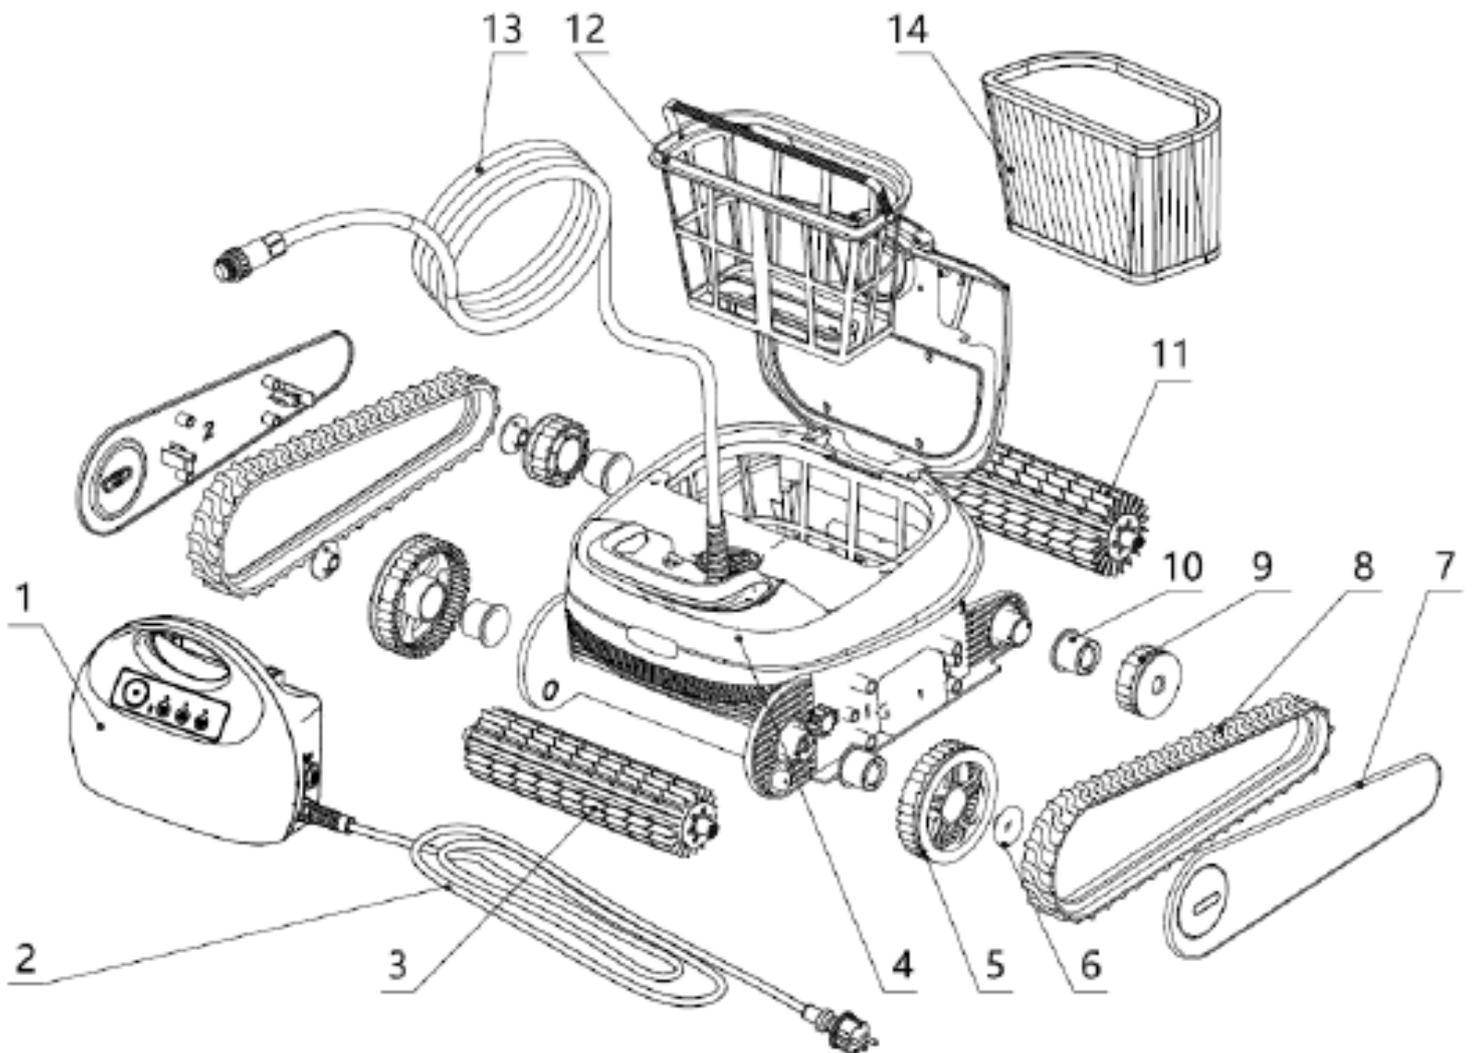

1	Controller box
2	Power cord for controller box 9
3	Wheel brush
4	Main body
5	Drive wheel
6	Drive wheel fixing block
7	Side panel
8	Drive belt
9	Driven wheel
10	Sleeve
11	Wheel brush
12	Filter basket
13	Floating cable
14	Filter paper core

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

The material in this manual is for informational purposes only. The product(s) it describes are subject to change without prior notice, due to the manufacturer's continuous development program. XtremePowerUS makes no representations or warranties with respect to this manual or with respect to the products described herein. XtremePowerUS shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.



SAVE THESE INSTRUCTIONS.

Questions, issues or missing parts?

Before returning to your retailer, our customer service team is here to help.



Call Us: 909.628.0880

Email Us: customer@xtremepowerusa.com

Hours of Operation: 9am - 3pm PST Monday - Friday

PRODUCT MADE IN CHINA